



Assemble short sides:

Unfold & lay down short cardboard -centered 1" inside of edge.

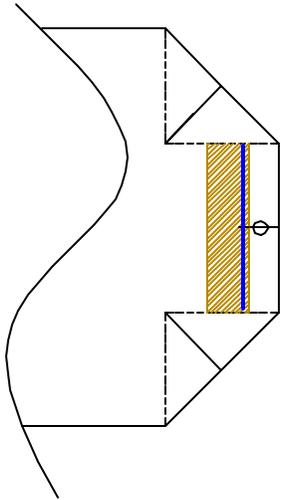


Run a line of glue close to outside edge of cardboard.

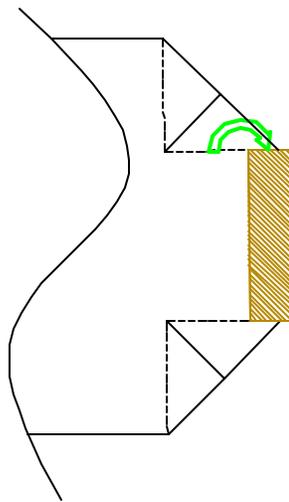

Carefully flip it over and squish it down.

Fold flaps back in & run a line of glue close to the outside edge of the cardboard.

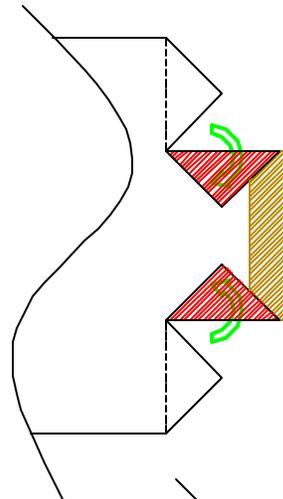

Fold cardboard back over, snug-up hem, and let the glue grab.

